



User Guide - Addendum

Trolley Drawer Unit

This addendum is to be used in the event of the drawer and fixings, towards the back of the drawer, being too close due to a tolerance build up. If this is the case please follow the assembly steps shown below.

Assembly:

1. Pull drawer out slightly to expose the screw heads.
2. Unscrew & remove the two rear fixings, ensuring all nuts and washers are retained as these will be reused.
3. Insert a screw through one of the washers and through the inside of the outer case until the end is exposed through the P shaped clip.
4. Attach the nut onto protruding end of the screw. Do not fully tighten.
5. Repeat steps 3 & 4 for the other screw.
6. Stand the trolley back onto its castors.
7. Position the drawer unit in the desired position on the trolley.
8. Fully tighten both nuts and screws to secure the draw unit in position.
9. Repeat the inspection points shown in the main user guide.

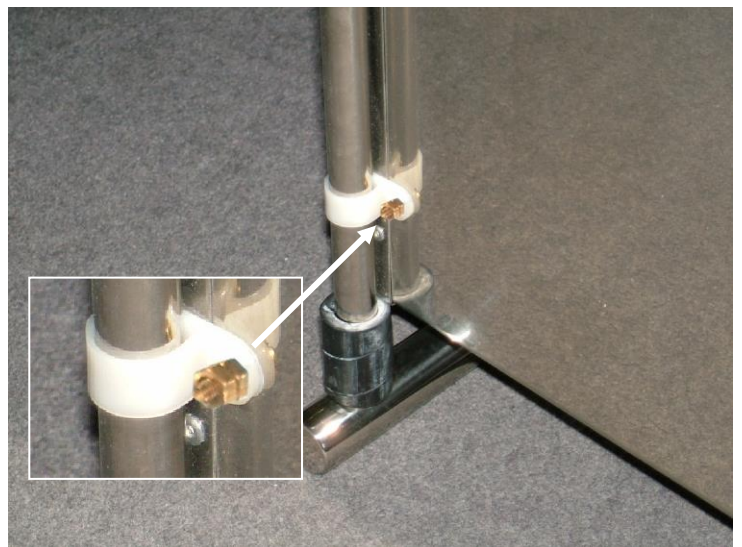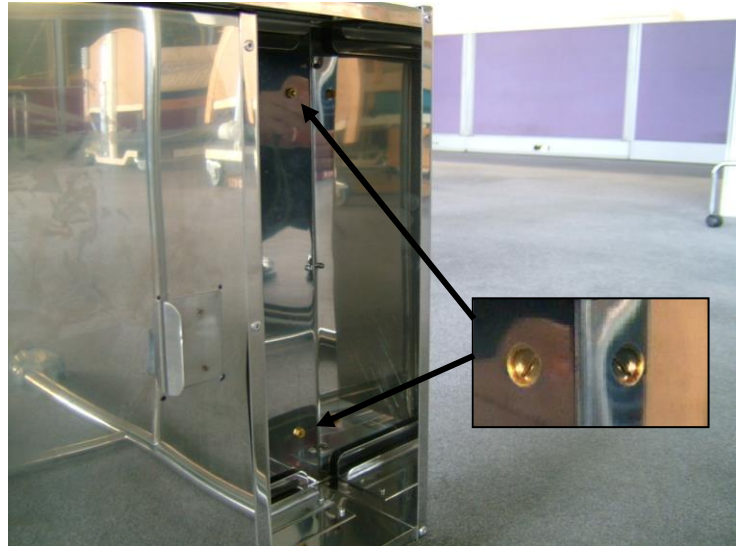

Sidhil Limited Sidhil Business Park Holmfield Halifax West Yorkshire HX2 9TN

Tel: +44 (0)1422 233000 Fax: +44 (0)1422 233010 Email: info@sidhil.com
Sales Tel: +44 (0)1422 233030 Sales Fax: +44 (0)1422 233010

A Member of the Siddall & Hilton Ltd Group of Companies

